


Model:


STL-FLK100PXYYZZ; STL-FLK100PHXYYZZ; STL-FLK150PXYYZZ; STL-FLK150PHXYYZZ;
STL-FLK200PXYYZZ; STL-FLK230PXYYZZ; STL-FLK230PHXYYZZ; STL-FLK300PXYYZZ;
STL-FLK300PHXYYZZ; STL-FLK400PXYYZZ; STL-FLK400PHXYYZZ

Model number parameter list:

| Item | Model | Input Voltage | Power Factor | Watt | Input Current | Weight |
|------|-------------------|---------------|--------------|------|---------------|----------|
| A | STL-FLK100PXYYZZ | 100–277VAC | >0.9 | 100W | 1.5A | 13 LBS |
| B | STL-FLK100PHXYYZZ | 277–480VAC | | 100W | 0.55A | 13 LBS |
| C | STL-FLK150PXYYZZ | 100–277VAC | | 150W | 1.8A | 13.9 LBS |
| D | STL-FLK150PHXYYZZ | 277–480VAC | | 150W | 0.88A | 13.9 LBS |
| E | STL-FLK200PXYYZZ | 100–277VAC | | 200W | 2.5A | 13.9 LBS |
| D | STL-FLK230PXYYZZ | 100–277VAC | | 230W | 2.5A | 22.3 LBS |
| F | STL-FLK230PHXYYZZ | 277–480VAC | | 230W | 1.4A | 22.3 LBS |
| G | STL-FLK300PXYYZZ | 100–277VAC | | 300W | 3.5A | 22.3 LBS |
| H | STL-FLK300PHXYYZZ | 277–480VAC | | 300W | 1.8A | 22.3 LBS |
| G | STL-FLK400PXYYZZ | 100–277VAC | | 400W | 5.0A | 28 LBS |
| I | STL-FLK400PHXYYZZ | 277–480VAC | | 400W | 2.8A | 28 LBS |

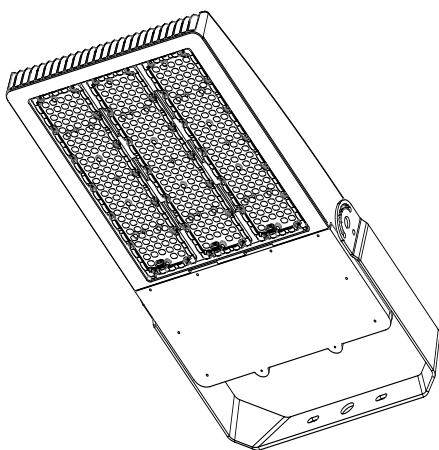

BRACKET

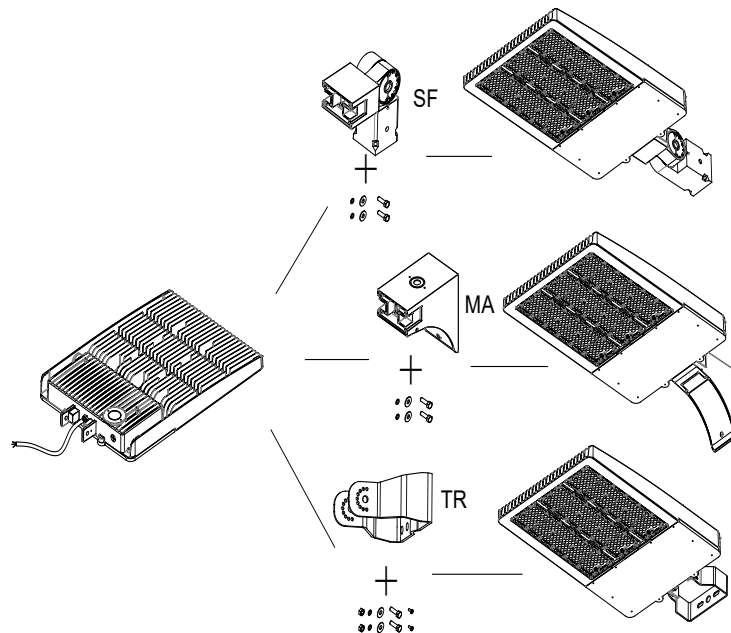

1. Instruction

- This LED Area Light/Flood Light uses the latest in solid state lighting technology for long, life, low maintenance, and high efficiency.

- The same as traditional HID lighting. There are two installation methods, suitable for various occasion.
- An internal power-factor-corrected switch-mode supply allows it to be used from any nominal 100-277V&277-480V, 50~60Hz AC supply without any variation in light output.
- Suitable for use in the following locations:
 - Ambient Temp: -40~+40°C
 - Wet Locations

Note: Save these instructions for future reference.

2. Installation

Warning:

To avoid the risk of fire, explosion or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

Warning:

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.

Warning:

To avoid explosion:

- Make sure the supply voltage is the same as the rated luminaire voltage.
- Do not install where the marked operating temperatures exceed the ignition temperature of the hazardous atmosphere.
- Do not operate in ambient temperatures above those indicated on the luminaire nameplate.
- Keep lens tightly closed when in operation.


For supply connections use wire rated for at least 90°C

Installation Steps:

Refer to the following diagram when you install the fixture. Seven installation methods, directly fix to the mounting surface or fix to a post with a knuckle.

1. Directly fix to mounting surface

STL-FLK100PXYZZ/STL-FLK100PHXYZZ
 STL-FLK150PXYZZ/STL-FLK150PHXYZZ
 STL-FLK200PXYZZ
 STL-FLK2300PXYZZ/STL-FLK230PHXYZZ
 STL-FLK300PXYZZ/STL-FLK300PHXYZZ
 STL-FLK400PXYZZ/STL-FLK400PHXYZZ

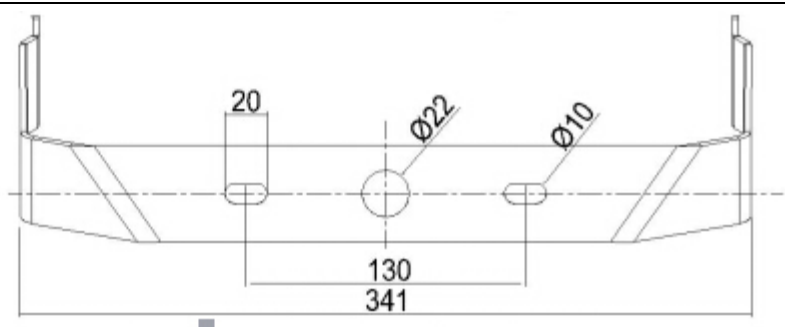

FOR MORE LIGHTING INFO CALL

1460 PARK AVENUE, EMERYVILLE, CA 94608
 510.891.1056

HELLO@SOLTECHLIGHTING.COM
 SOLTECHLIGHTING.COM

1. Use expansion bolts to secure the fixture on mounting surface.
 2. Keep enough length wires to ensure adjusting angle unhindered.
 Connect wires into wiring terminal; white wire to "Neutral" terminal, black wire to "Live" terminal, green wire to "Ground" terminal; and fix them by screws.


2. Mounting with a Slipfitter for Models:

STL-FLK100PXYZZ; STL-FLK100PHXYZZ; STL-FLK150PXYZZ; STL-FLK150PHXYZZ; STL-FLK200PXYZZ; STL-FLK230PXYZZ;
 STL-FLK230PHXYZZ; STL-FLK300PXYZZ; STL-FLK300PHXYZZ; STL-FLK400PXYZZ; STL-FLK400PHXYZZ

| | |
|---|---|
| <p style="text-align: center;">Step 1</p> <p>Adjust the fixture orientation by turning the bolt. In the above photo for the rocker installation hole, for the sensor installation hole in the bottom</p> | <p style="text-align: center;">Step 2</p> <p>Please use a post of diameter 2.36" for mounting, and tighten with screws. You can open the side cover from the side connection</p> |
|---|---|

3. Mounting with Arm for Models:


STL-FLK100PXYZZ; STL-FLK100PHXYZZ; STL-FLK150PXYZZ; STL-FLK150PHXYZZ; STL-FLK200PXYZZ; STL-FLK230PXYZZ;
 STL-FLK230PHXYZZ; STL-FLK300PXYZZ; STL-FLK300PHXYZZ; STL-FLK400PXYZZ; STL-FLK400PHXYZZ

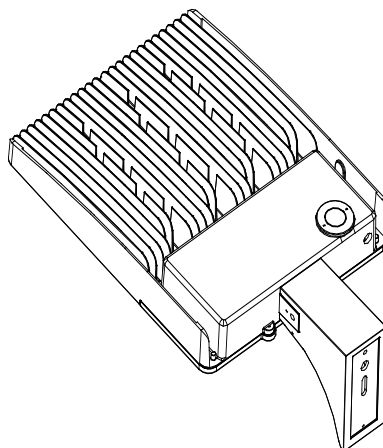

Directly with the screw on the lamp post. In the above straight arm has a reserved light installation hole, for the sensor installation hole in the bottom. You can open the side cover from the side connection

4. Wall Mounted Installation:

STL-FLK100PXYZZ; STL-FLK100PHXYZZ; STL-FLK150PXYZZ; STL-FLK150PHXYZZ; STL-FLK200PXYZZ; STL-FLK230PXYZZ;
STL-FLK230PHXYZZ; STL-FLK300PXYZZ; STL-FLK300PHXYZZ; STL-FLK400PXYZZ; STL-FLK400PHXYZZ

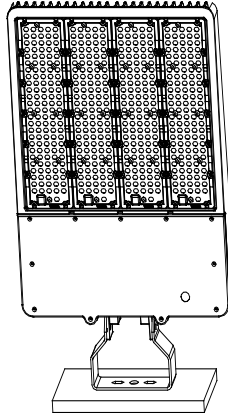

The mounting method of the straight arm is added to a wall mounted fixing plate, and the fixing plate is mounted on the wall, and the fixing plate is fixed by a nut.

After installation, please

- check whether the lighting fixture is firmly fixed.
- check whether wires are connected correctly.
- *At last, turn on the power, and check if the lighting fixture works well. If not, please turn off the power and contact with local dealer.*